

Ohřívací trouba 24V

- 1-Nastavení funkcí
- 2-Nastavení časovače
- 3-Plech
- 4-Rošt
- 5-Držák rošt/tác




NASTAVENÍ FUNKCÍ

- Ovladač otočte do požadované polohy - funkce.
- VYPNUTO / OFF: v této pozici je přístroj vypnutý.
- Horní ohřev : při tomto nastavení bude hřát horní topné těleso.
- Spodní ohřev : při tomto nastavení bude hřát spodní topné těleso.
- Horní a spodní ohřev : při tomto nastavení budou hřát obě topná tělesa.



NASTAVENÍ ČASOVAČE

Na otočném ovladači časovače si nastavte požadovaný čas pečení. Maximální čas, který lze nastavit je 60 minut. Jakmile nastavený čas uplyne, přístroj přestane hřát a ozve se zvukový signál. Bez nastaveného časovače přístroj nepracuje/nehřeje. Upozornění: přístroj hřeje jen pokud je nastaven/zapnut časovač a nastaven konkrétní režim ohřevu. Během procesu ohřevu je kdykoli možné měnit nastavení časovače (čas snižovat či prodlužovat).

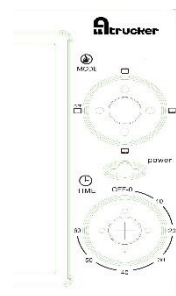

ČIŠTĚNÍ A ÚDRŽBA

- Vždy se ujistěte, že jste nejdříve přístroj odpojili od elektrického proudu.
- Před čištěním vždy nechte přístroj vychladnout.
- Po každém použití troubu uvnitř očistěte jemným vlhkým hadříkem.
- Jednotlivé příslušenství (plech, rošt, atd ...) lze mýt ve vlažné vodě se saponátem.
- Dveře a ovládací panel můžete čistit jemným vlhkým hadříkem

I UPOZORNĚNÍ – UMÍSTĚNÍ A INSTALACE

- Nikdy neumísťujte přístroj do blízkosti hořlavých ani vznětlivých materiálů.
- Nepoužívejte přístroj venku.
- Přístroj vždy používejte pouze na stabilním, suchém a rovném místě.
- Nikdy neumísťujte přístroj do blízkosti plynového, lihového spotřebiče.
- Nikdy nepoužívejte přístroj za jízdy !**

Technické parametry

Napájecí napětí	24V	Topné spirály	2x
Výkon	300W	Rozměr zařízení	34 x 24 x 21 cm
Obsah	8L	Rozměr trouby	27 x 17 x 17 cm

Heating oven 24V

1-Setting functions

2-Setting the timer

3-Tray


4-Slot

5-Holder grate/tray



FUNCTION SETTINGS

- Turn the rotary pushbutton to the desired position - function.
- OFF / OFF: in this position the device is switched off.
- Top heating : this setting will heat the top heating element.
- Bottom heating : this setting will heat the bottom heating element.
- Top and bottom heating : this setting will heat both heating elements.

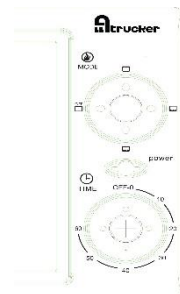

TIMER SETTINGS

Set the desired cooking time on the rotary timer dial. The maximum time that can be set is 60 minutes.

Once the set time has elapsed, the device stops heating and an audible signal sounds.

Without the timer set, the unit does not work/does not heat.

Please note: the appliance will only heat if the timer is set/on and a specific heating mode is set.

During the heating process, the timer settings can be changed at any time (to decrease or increase the time).

CLEANING AND MAINTENANCE

- Always make sure to unplug the device first.
- Always allow the unit to cool down before cleaning.
- After each use, clean the inside of the oven with a soft damp cloth.
- The individual accessories (baking tray, grid, etc...) can be washed in lukewarm water and detergent.
- You can clean the door and control panel with a soft damp cloth

NOTICE - LOCATION AND INSTALLATION

- Never place the unit near flammable or combustible materials.
- Do not use the device outdoors.
- Always use the device only in a stable, dry and level place.
- Never place the appliance near a gas or alcohol appliance.
- **Never use the device while driving !**

Technical parameters

Supply voltage 24V Heating coils 2x

Power 300W Dimensions 34 x 24 x 21 cm

Contents 8L Oven dimensions 27 x 17 x 17 cm